

# Thule Rapid System Kit 1064





# > Instructions

**TOYOTA HiLux Surf**, 5-dr SUV, 96-03

**TOYOTA Tacoma**, 4-dr Quad Cab, \*96-04

**TOYOTA 4 Runner**, 5-dr SUV, 96-03 / \*96-02

\*North America

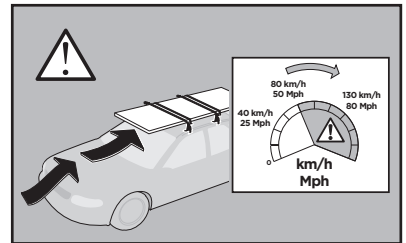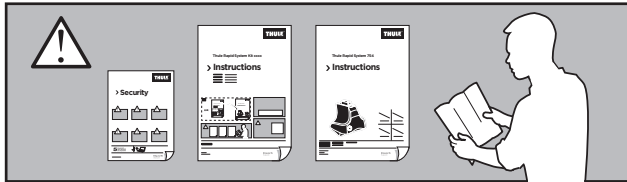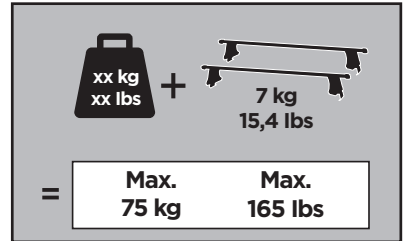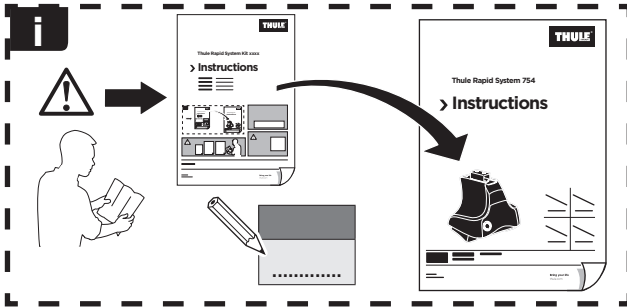



ISO 11154-E

**141064**

C.20121210  
519-1064-02

**Bring your life**

thule.com

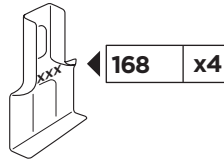



x1



x1

# 1

	X (scale)	X (mm)	X (inch)
<b>TOYOTA HiLux Surf</b> , 5-dr SUV, 96-03	<b>32,5</b>	<b>976</b>	<b>38 <sup>3</sup>/<sub>8</sub></b>
<b>TOYOTA Tacoma</b> , 4-dr Quad Cab, *96-04	<b>32,5</b>	<b>976</b>	<b>38 <sup>3</sup>/<sub>8</sub></b>
<b>TOYOTA 4 Runner</b> , 5-dr SUV, 96-03 / *96-02	<b>32,5</b>	<b>976</b>	<b>38 <sup>3</sup>/<sub>8</sub></b>

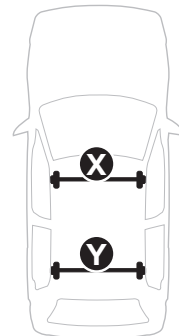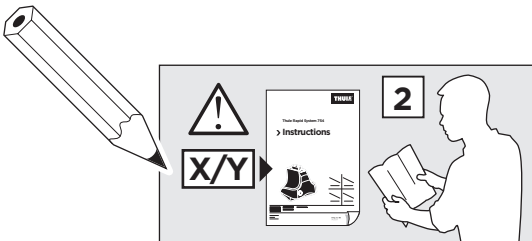



	Y (scale)	Y (mm)	Y (inch)
<b>TOYOTA HiLux Surf</b> , 5-dr SUV, 96-03	<b>32,5</b>	<b>976</b>	<b>38 <sup>3</sup>/<sub>8</sub></b>
<b>TOYOTA Tacoma</b> , 4-dr Quad Cab, *96-04	<b>32,5</b>	<b>976</b>	<b>38 <sup>3</sup>/<sub>8</sub></b>
<b>TOYOTA 4 Runner</b> , 5-dr SUV, 96-03 / *96-02	<b>32,5</b>	<b>976</b>	<b>38 <sup>3</sup>/<sub>8</sub></b>

# 2


**TOYOTA HiLux Surf**, 5-dr SUV, 96-03

**TOYOTA Tacoma**, 4-dr Quad Cab, \*96-04

**TOYOTA 4 Runner**, 5-dr SUV, 96-03 / \*96-02

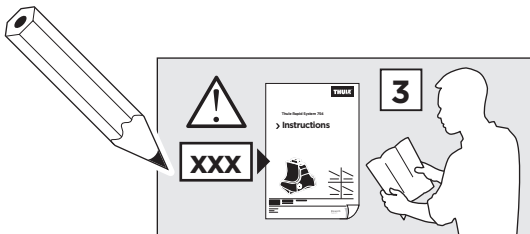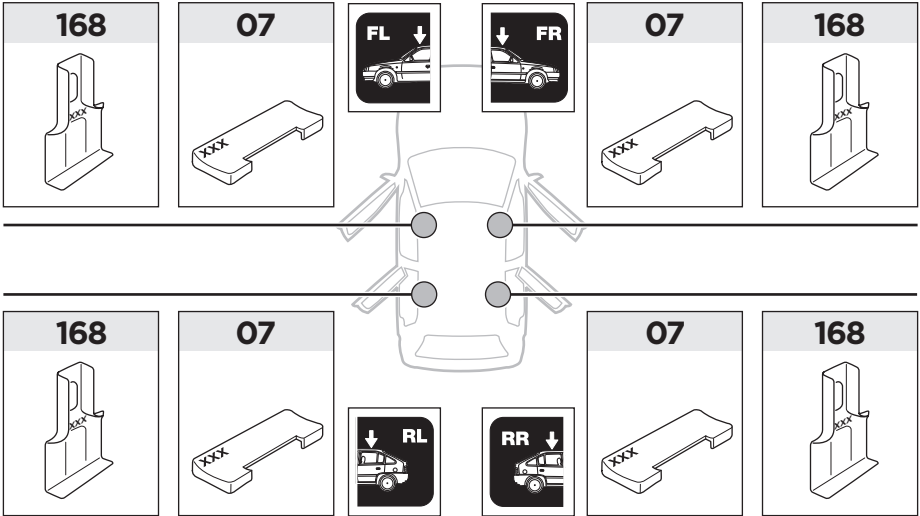

**3**

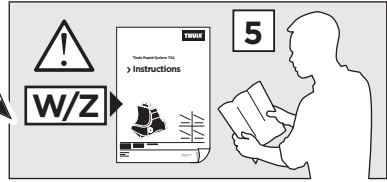

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>TOYOTA HiLux Surf</b> , 5-dr SUV, 96-03	<b>270</b>	<b>700</b>	<b>10 <sup>5</sup>/<sub>8</sub></b>	<b>27 <sup>1</sup>/<sub>2</sub></b>
<b>TOYOTA Tacoma</b> , 4-dr Quad Cab, *96-04	<b>270</b>	<b>700</b>	<b>10 <sup>5</sup>/<sub>8</sub></b>	<b>27 <sup>1</sup>/<sub>2</sub></b>
<b>TOYOTA 4 Runner</b> , 5-dr SUV, 96-03 / *96-02	<b>270</b>	<b>700</b>	<b>10 <sup>5</sup>/<sub>8</sub></b>	<b>27 <sup>1</sup>/<sub>2</sub></b>

