





Thule Rapid System Kit 1412

> Instructions

HYUNDAI Accent, 4-dr Sedan, 06-10 / *06-09

HYUNDAI Verna, 4-dr Sedan, 06-10

*North America

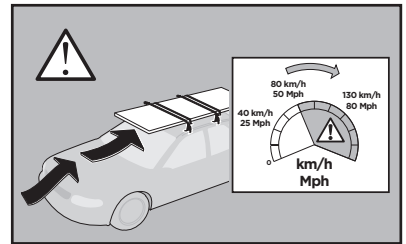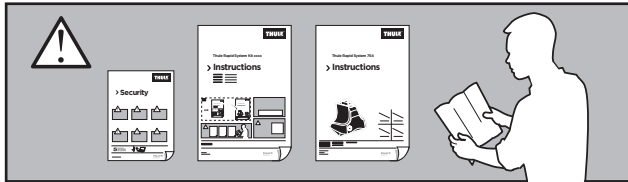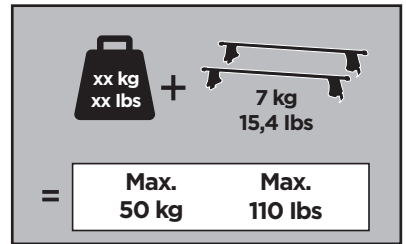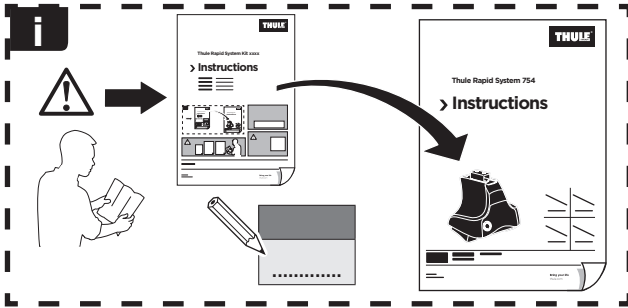

ISO 11154-E

141412


C.2013.0117
519-1412-03

Bring your life


thule.com




93 x2



120 x1



121 x1




819 x2



820 x2





x1



x1

1

	X (scale)	X (mm)	X (inch)
HYUNDAI Accent , 4-dr Sedan, 06-10 / *06-09	31	961	37 ⁷ / ₈
HYUNDAI Verna , 4-dr Sedan, 06-10	31	961	37 ⁷ / ₈

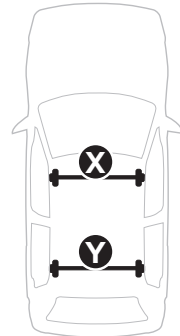
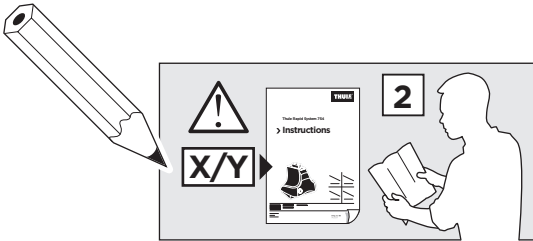


	Y (scale)	Y (mm)	Y (inch)
HYUNDAI Accent , 4-dr Sedan, 06-10 / *06-09	29,5	946	37 ¹ / ₄
HYUNDAI Verna , 4-dr Sedan, 06-10	29,5	946	37 ¹ / ₄


2

HYUNDAI Accent, 4-dr Sedan, 06-10 / *06-09

HYUNDAI Verna, 4-dr Sedan, 06-10

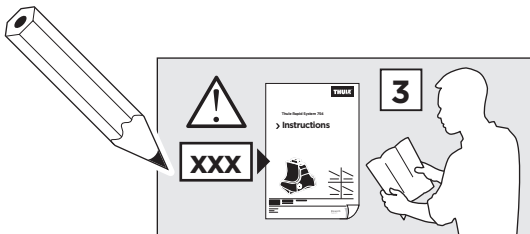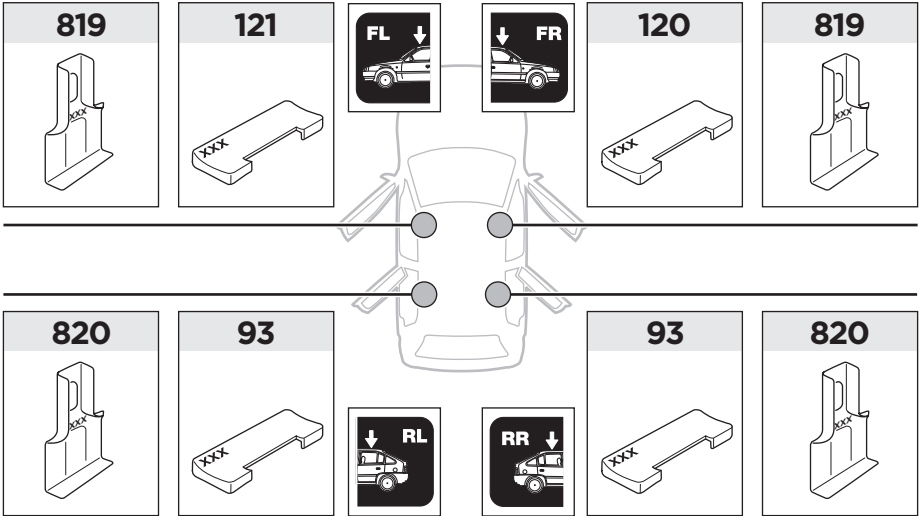

3

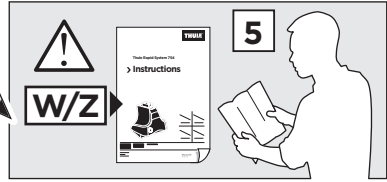

	W (mm)	Z (mm)	W (inch)	Z (inch)
HYUNDAI Accent , 4-dr Sedan, 06-10 / *06-09	140	650	5 1/2	25 5/8
HYUNDAI Verna , 4-dr Sedan, 06-10	140	650	5 1/2	25 5/8

